

## How to....Clear a Coverage Map

1. Press **Main Menu** button



2. Press **GS2 or GS3** button

3. Press **Mapping** button, **Button A** in the top right of the screen

4. Press **Map Setting** button in the bottom right of the screen, select **Clear All** or **Clear Current**.

5. Press **Accept** button to clear map coverage



6. Press **Accept** button once again

7. Press **Home** button to resume normal operation

### Top tip !

Good practice is to clear field map coverage once a job has been completed; coverage serves no purpose afterwards and will slowly fill up the memory.